


PANZITTA SALES & SERVICE
72 George Avenue
Wilkes-Barre, PA 18705
570-822-6720 800-822-6720
www.panzittasales.com

B4120GL

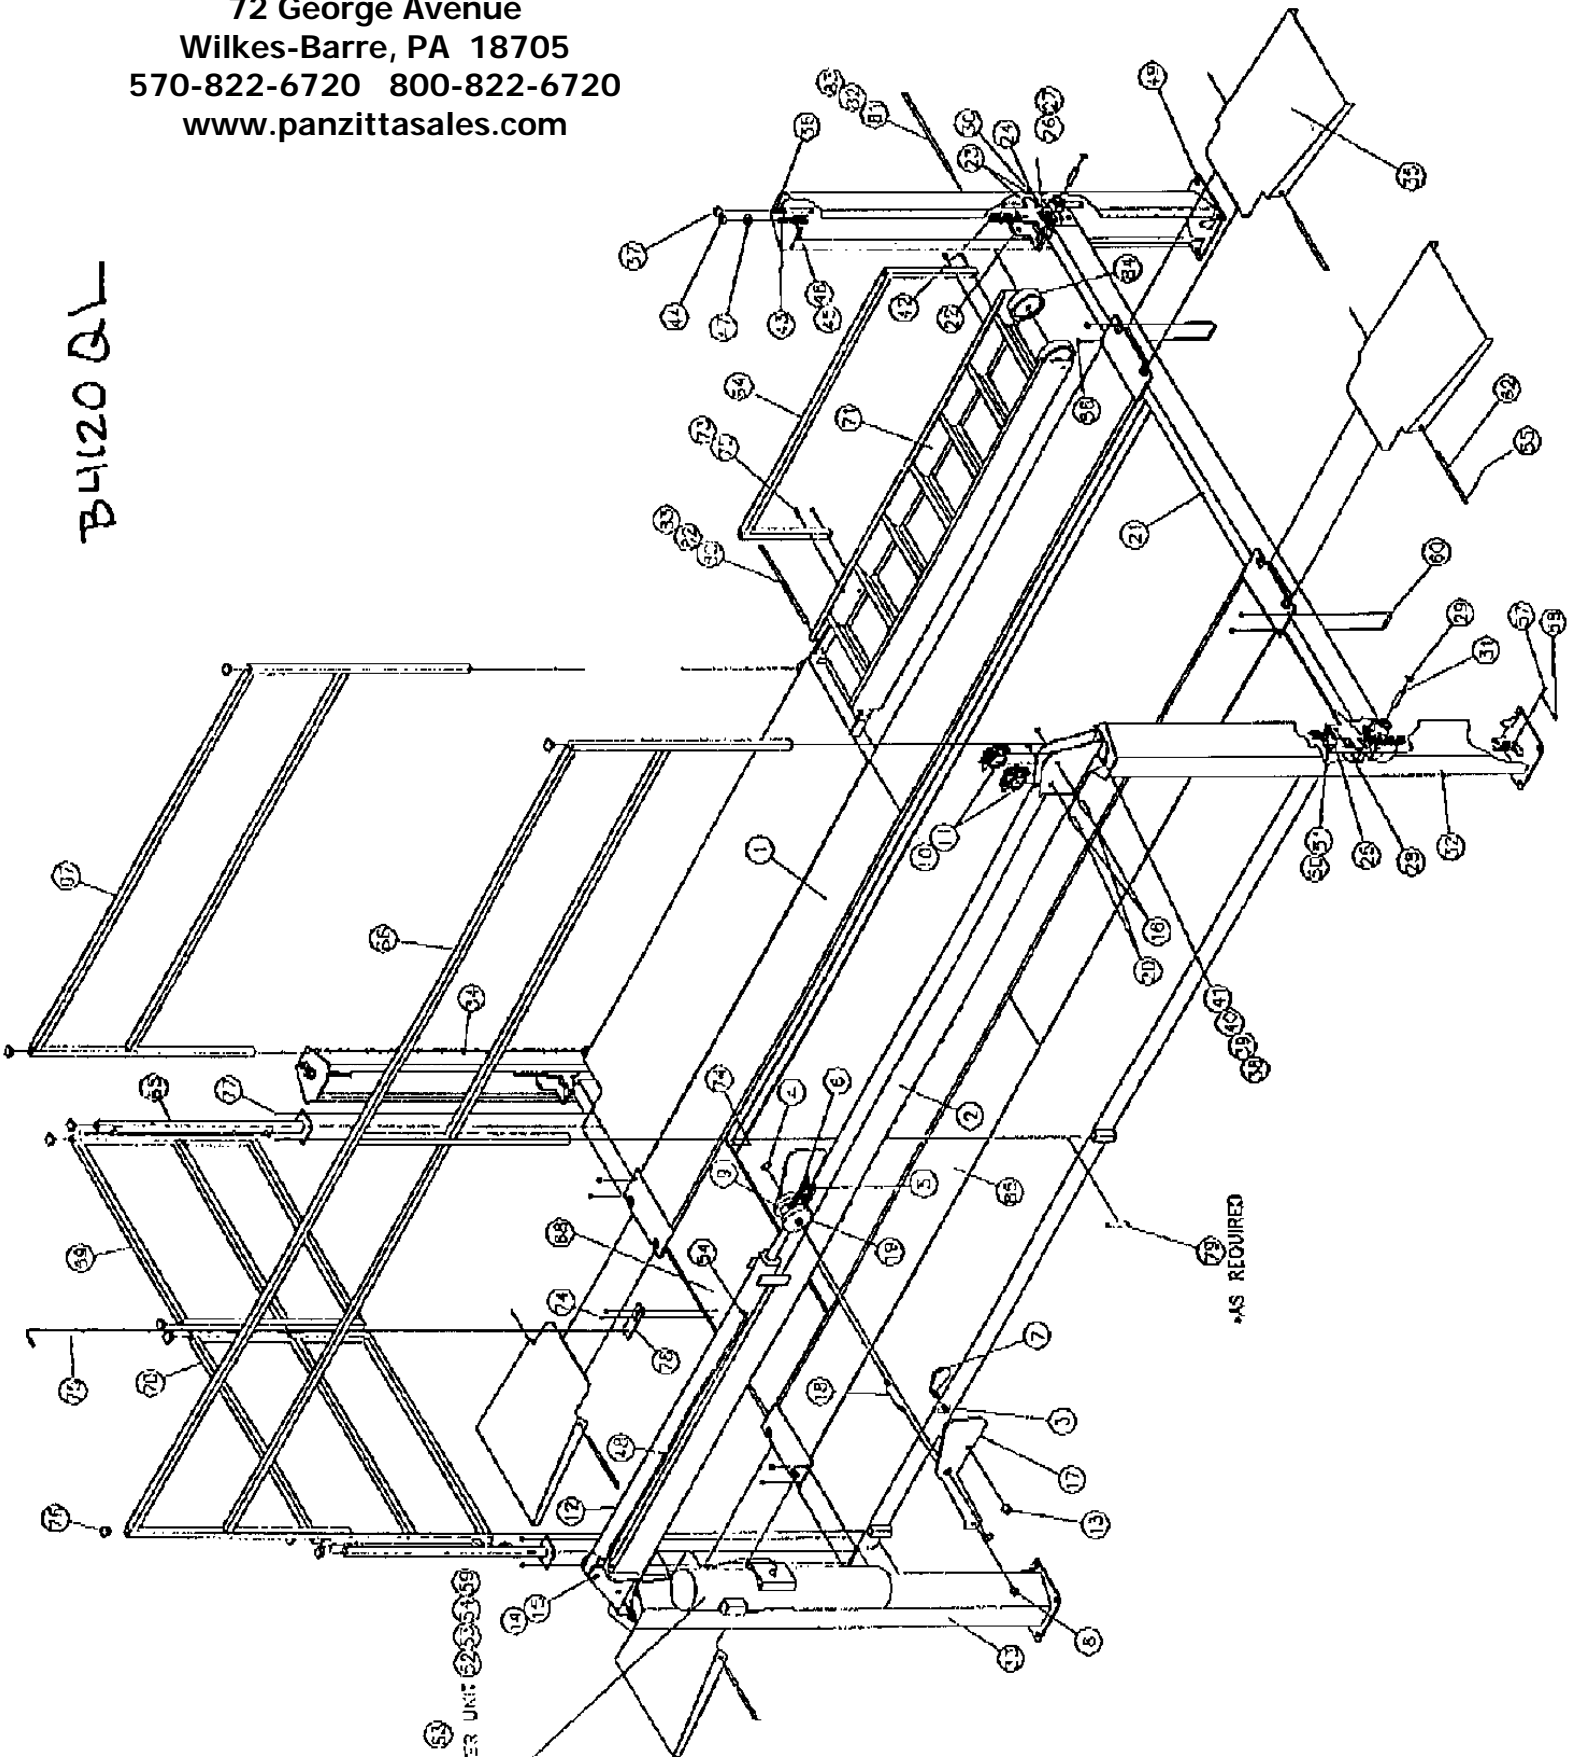

QTY	DESCRIPTION	PART NUMBER	IF	QTY	DESCRIPTION	PART NUMBER
1	RH RUNWAY & EXT. WELDMENT	601-40-0511	44	2	LOCK NUT	314-03-0021
1	OVERHEAD BEAM WELDMENT	601-40-0401	45	2	MASTER LINK	304-05-0005
4	FLAT WASHER	320-03-0057	46	2	COTTER PIN	315-02-0002
2	RETAINER RING	317-01-0011	47	2	FLAT WASHER	320-03-0024
1	CHAIN	443-02-0984	48	1	HOSE ASS'LY	601-40-0428
1	CHAIN	443-02-0985	49	16	ANCHOR BOLT ASS'LY	302-15-0002
1	LATCH RELEASE WELDMENT	601-40-0410	50	2	LOCK NUT	314-03-0050
2	NYLON LOCK NUT	314-03-0059	51	2	SHOULDER BOLT	319-22-0015
2	NYLON LOCK NUT	315-03-0002	52	4	NYLON LOCK NUT	314-03-0083
2	DOWELL PIN	423-01-0013	53	4	HEX HEAD BOLT	302-02-0115
3	SHEAVE	301-01-0022	54	2	90 ELBOW	312-01-0104
6	BEARING FOR SHEAVE	591-01-1271	55	4	COTTER PIN	315-02-0002
1	4 POST CYLINDER	314-03-0075	56	4	JAM NUT	314-04-0023
1	CENTER LOCK	315-02-0020	57	2	HEADED PIN	443-02-0874
2	COTTER PIN	443-02-0879	58	2	COTTER PIN	315-02-0021
1	CYLINDER MOUNT PIN	443-02-0880	59	4	FLAT WASHER	320-03-0035
3	SHEAVE PIN	443-02-0852	60	4	U-BOLT	443-02-0875
2	LATCH PLATE	443-02-0886	62	4	RAMP MOUNT PIN	443-02-0914
1	LOCK PIN	443-02-0887	63	1	POWER UNIT	367-01-0079
2	WHEEL ASSEMBLY	317-01-0012	64	1	LADDER RAIL WELDMENT	601-40-0513
6	EXT. RETAINER RING	601-40-0412	65	2	CORNER POST WELDMENT	601-40-0514
2	CROSSBEAM WELDMENT	601-40-0416	66	1	LH RAIL WELDMENT	601-40-0516
4	LATCH WELDMENT	320-03-0057	67	1	RH RAIL WELDMENT	601-40-0517
12	FLAT WASHER	429-02-0039	68	1	CENTER COVER WELDMENT	601-40-0518
4	SPRING	443-02-0977	69	1	GATE WELDMENT	601-40-0519
2	LOCK BLOCK	423-01-0011	70	1	GATE WELDMENT W/LOCK	601-40-0520
4	SHEAVE	301-01-0023	71	1	LADDER WELDMENT	601-40-0538
8	BEARING FOR SHEAVE	443-02-0882	72	4		302-02-0258
6	LATCH PIN	317-01-0012	73	4	TOPLOCK NUT	314-03-0042
16	EXT. RETAINER RING	443-02-0909	74	2	HH BOLT	302-02-0062
4	ACTUATOR PLATE	443-02-0880	75	1	LOCK ROD, GATE	601-40-0554
2	SHEAVE PIN	601-40-0418	76	12	SQUARE TUBE CAP	443-02-0867
1	POST WELDMENT	601-40-0422	77	8	HH BOLT	302-02-0179
1	POST WELD., POWER UNIT	601-40-0423	78	1	GATE LOCK	601-40-0725
2	POST WELD., STANDARD	601-40-0438	79	5	SHIM SPACER	601-40-0726
4	RAMP WELDMENT	443-02-0863	80	1	LADDER MOUNT PIN	601-40-0542
4	SAFETY ROD	314-02-0014	81	1	WHEEL MOUNT PIN	601-40-0543
8	HEX NUT	302-02-0123	82	8	COTTER PIN	315-02-0011
18	HEX HEAD BOLT	320-03-0052	83	4	FLAT WASHER	320-03-0115
36	FLAT WASHER	320-04-0007	84	2	POLYURETHANE WHEEL	443-02-0866
18	LOCK WASHER	314-02-0012	85	1	LH RUNWAY & EXT. WELDMENT	601-40-0512
18	HEX NUT	443-02-0913				
2	CHAIN	443-02-0862				
2	THREADFD FND					

Maintenance

1. Inspect the lift daily for loose anchor bolts, fluid leaks, and loose connections.

Retighten anchor bolts as necessary.

Isolate and eliminate the source of leaks.

Reconnect and/or reseal loose power cords, power connections, and hydraulic connections.

2. Check fluid level in reservoir weekly, and add oil as necessary.
3. Check lifting chains and cross rail chains for wear and tension. Adjust as necessary. Lubricate chains with light oil to reduce drag. Lubricate chain rollers and check for wear.

Troubleshooting

- A. Lift will not raise when button is pushed.
 - Blown fuse. Replace fuse.
 - Crushed hydraulic line. Replace line.
 - Microswitch not operating. Replace switch.
 - Oil supply low. Fill reservoir to correct level.
 - Lift overloaded. Remove the load.
- B. Lift will not lower.
 - Lift is obstructed. Clear area under lift.
 - Safety has not been released. Release safety.
- C. Lift will drift down when upward travel stops.
 - Dump valve is clogged. Purge system:
Press dump valve and actuate pump simultaneously.
- D. Lift will not lift vehicle to top position.
 - Oil supply low. Fill reservoir to correct level.
- E. Motor overheats or makes loud, laboring noises.
 - Damaged or faulty unit. Contact factory.

Parts Identification

The exploded parts identification drawings and parts listings on the following pages are provided for easy identification of parts during lift installation and when making warranty claims or ordering replacement parts.

PANZITTA SALES & SERVICE
 72 George Avenue
 Wilkes-Barre, PA 18705
 570-822-6720 800-822-6720
www.panzittasales.com